 


Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup, if it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

**Introduction:**  
 RM-L1130+X PLUS is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels is needed. It can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

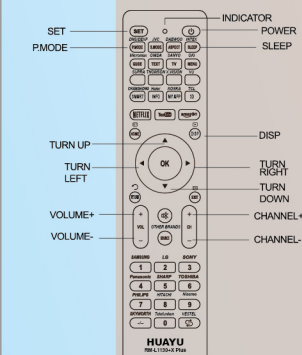

**Battery Installation**  
 In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.

**Battery Description**  
 ● The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.  
 ● Please do not put old and new batteries or different types of batteries together.  
 ● In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.  
 ● You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.


Methods for setting remote controller:  
 This remote controller has the following methods for setup, you can choose any of them.

**A. Inputting code:**

 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits




2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.



 4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.




**B. Manually searching for the code:**


1. Turn on your TV set, let your TV set be in the normal state play, and



 
2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.



 3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.




 4. Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



**C. Automatically searching code:**

 
1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.




 3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

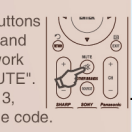


**D. Point to Point Brand Searching:**

 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, Telefunken = "0"

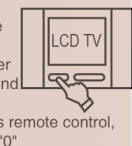

 2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.



**E. Restore factory Settings**

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

**Brand symbol table**

PAUSE	SLEEP	ASPECT	SLEEP	QUICK	TEXT	TV	MENU	RED	GREEN
UNDEFP	JVC	SANWAO	INTEK	RECCOR	ONDA	SARNO	OK	SUPRA	TECHNION
YELLOW	BLUE	SMART	INFO	MY APP	SD	1	2	3	4
ELKON	TV	SHANGHAI	HAIR	KONKA	TCL	SANWANG	LG	SONY	PANASONIC
S	S	7	3	3	3	3	3	3	3
SHARP	TOURNAI	PHILIPS	PHILIPS	HAIER	SANYO	SANYO	WESTEL		

4. Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

**RM-L1130+X PLUS (RU)**

**Настройка по бренду:**

1. Включите телевизор вручную  
 2. Найдите соответствующую вашему бренду кнопку на пульте, например для бренда Hisense это кнопка "9".



3. Нажмите и удерживайте кнопку бренда, световой индикатор начнет мигать, когда на экране ТВ появится индикатор громкости, отпустите кнопку, световой индикатор погаснет.



4. Когда на экране ТВ появится индикатор громкости, отпустите кнопку "SET".

 
Пульт настроен, проверьте работоспособность, если пульт работает некорректно, повторите настройку.

**Восстановление заводских настроек:**


Одновременно нажмите кнопки "SET" и "0", а затем отпустите, индикатор мигнет 3 раза, пульт вернется к заводским настройкам

**Ручной поиск кода:**

1. Включите телевизор вручную.  
 2. Одновременно нажмите кнопки "SET" и "POWER", загорится световой индикатор (отпустите кнопки), пульт находится в состоянии ручного поиска кода.



 3. Нажимайте кнопки "VOL+" или "VOL-", до тех пор, пока на экране ТВ не появится индикатор громкости.




4. Проверьте работоспособность пульта, если пульт функционирует нормально нажмите кнопку "SET", световой индикатор погаснет.

Пульт настроен, проверьте работоспособность, если пульт работает некорректно, повторите настройку.


**Ручной ввод кода:**

 1. Включите телевизор вручную.  
 2. Найдите соответствующий код в каталоге пультов.  
 3. Одновременно нажмите кнопки "SET" и "POWER", загорится световой индикатор (отпустите кнопки).




4. Введите трехзначный код (указан над изображением пульта), световой индикатор погаснет.

 
Настройка завершена, проверьте работоспособность, если пульт работает некорректно, повторите настройку.

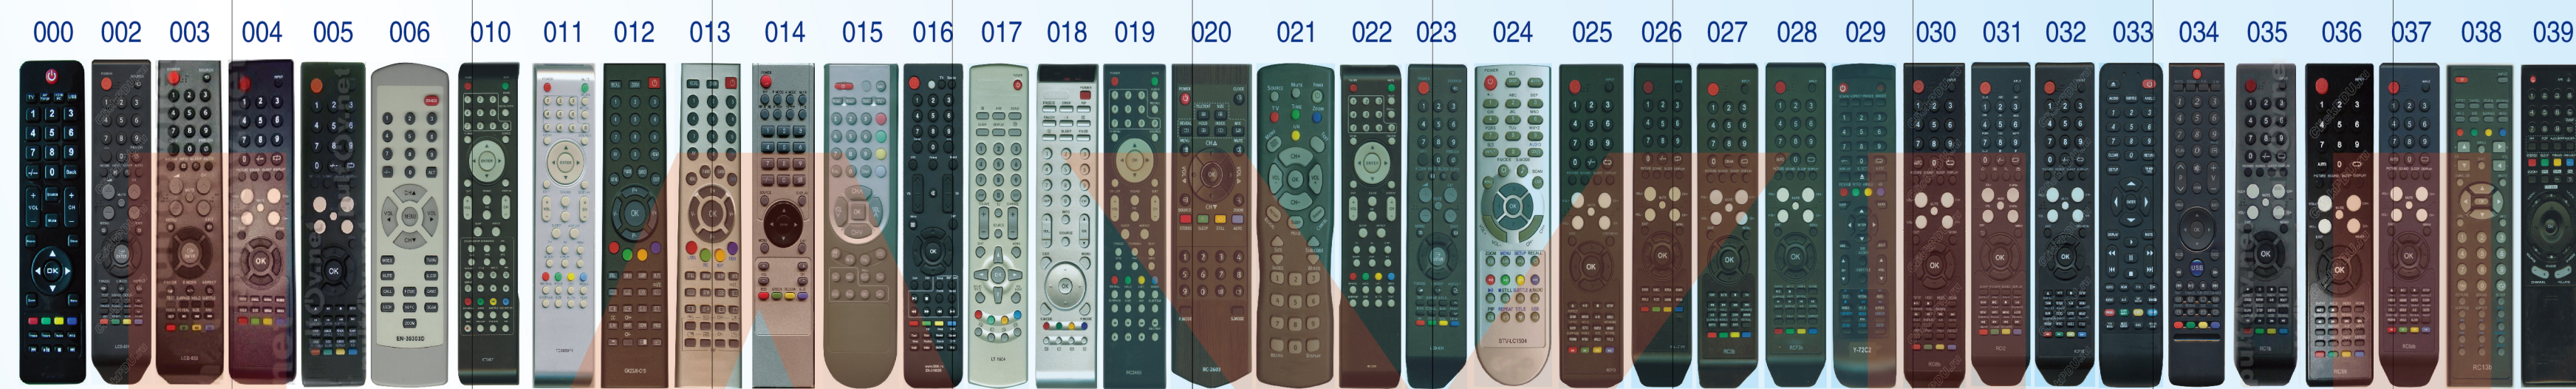

000 AOC AOC  
 002 GENERAL LCD-831  
 003 GENERAL LCD-832  
 004 IZUMI TL19H405B  
 005 IZUMI 0152  
 006 EN 30303D  
 010 MYSTERY KT6957 6857  
 011 AKIRA TC1860F1  
 012 GK23J6-C15  
 013 AKIRA LC1-15CHST  
 014 4-3-2010-002  
 015 BBK BBK  
 016 EN-31603B  
 017 BBK LT1504  
 018 BBK CAMERON  
 019 HOB380 RC2465  
 020 HOB387 RC-2603  
 021 HVD208 BBK  
 022 HVD209 RC1529  
 023 HOB228 LCD 831  
 024 HOB283 SUPRA 4627STV-LC1504  
 025 HOB302 HYUNDAI 1587 RCF1B  
 026 HOB303 SUPRA306 STV-LC1515  
 027 HOB327 Supra RC3b  
 028 HOB328 Supra RCF3b  
 029 HOB409 SUPRA Y-72C2  
 030 HOB410 SUPRA RC6b  
 031 HOB411 SUPRA RC12  
 032 RCF1B RCF1B  
 033 SUPRA BD-212  
 034 SUPRA HOF12H126 GPD11  
 035 SUPRA RC1b  
 036 SUPRA RC5b  
 037 SUPRA RC5db  
 038 SUPRA RC13b  
 039 SUPRA RC-118-0B

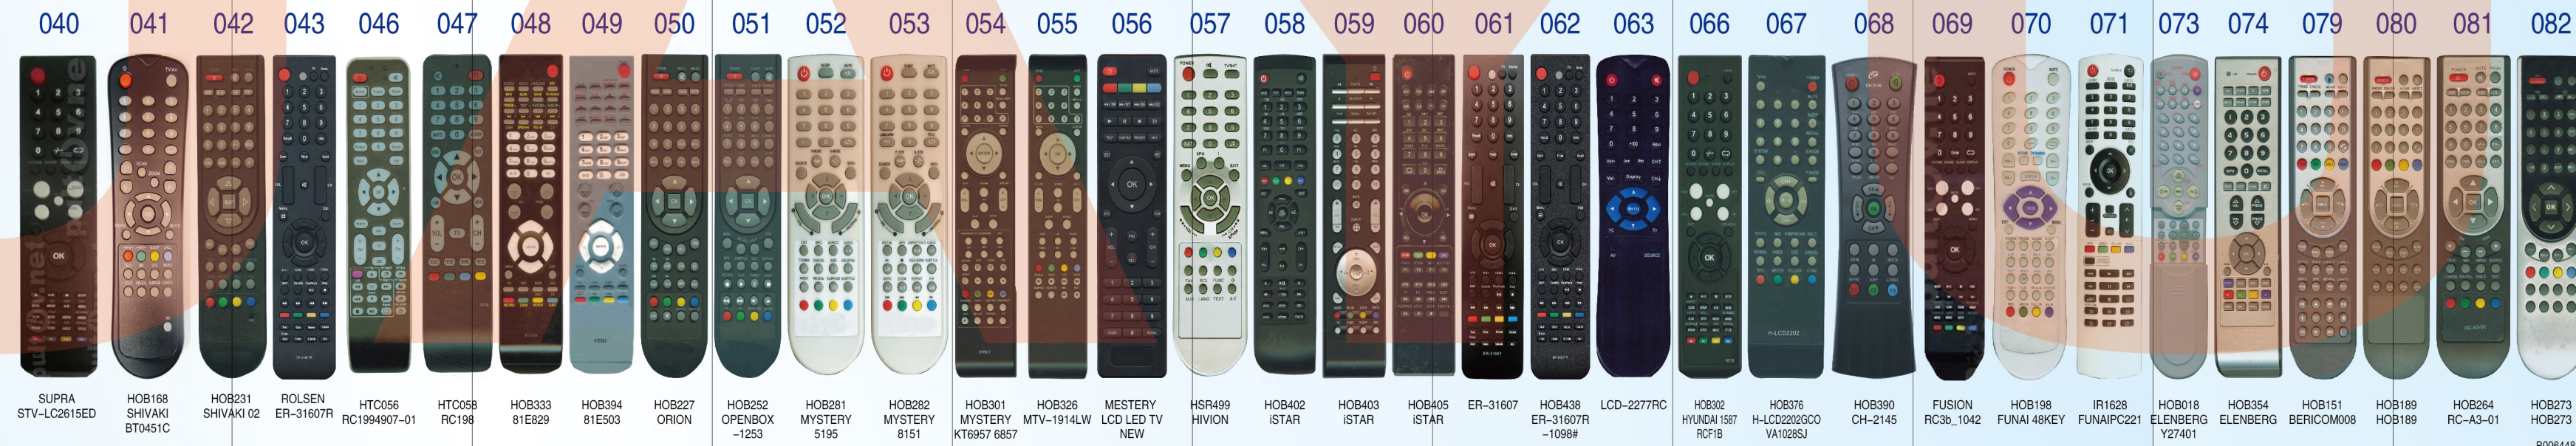 

040 SUPRA STV-LC2615ED  
 041 HOB168 SHIVAKI BT0451C  
 042 HOB231 SHIVAKI 02  
 043 ROLSEN ER-31607R  
 046 HTC056 RC1994907-01  
 047 HTC058 RC198  
 048 HOB333 81E829  
 049 HOB394 81E503  
 050 HOB227 ORION  
 051 HOB252 OPENBOX -1253  
 052 HOB281 MYSTERY 5195  
 053 HOB282 MYSTERY 8151  
 054 HOB301 MYSTERY KT6957 6857  
 055 HOB326 MTV-1914LW  
 056 MESTERY LCD LED TV NEW  
 057 HSR499 HIVION  
 058 HOB402 ISTAR  
 059 HOB403 ISTAR  
 060 HOB405 ISTAR  
 061 ER-31607  
 062 HOB438 ER-31607R -1098#  
 063 LCD-2277RC  
 066 HOB302 HYUNDAI 1587 RCF1B  
 067 HOB376 H-LCD2202GCO VA1028SJ  
 068 HOB390 CH-2145  
 069 FUSION RC3b-1042  
 070 HOB198 FUNAI 48KEY  
 071 IR1628 FUNAIPC221  
 073 HOB018 ELENBERG Y27401  
 074 HOB354 ELENBERG  
 079 HOB151 BERICOM008  
 080 HOB189 HOB189  
 081 HOB264 RC-A3-01  
 082 HOB273 HOB273  
 B0064480

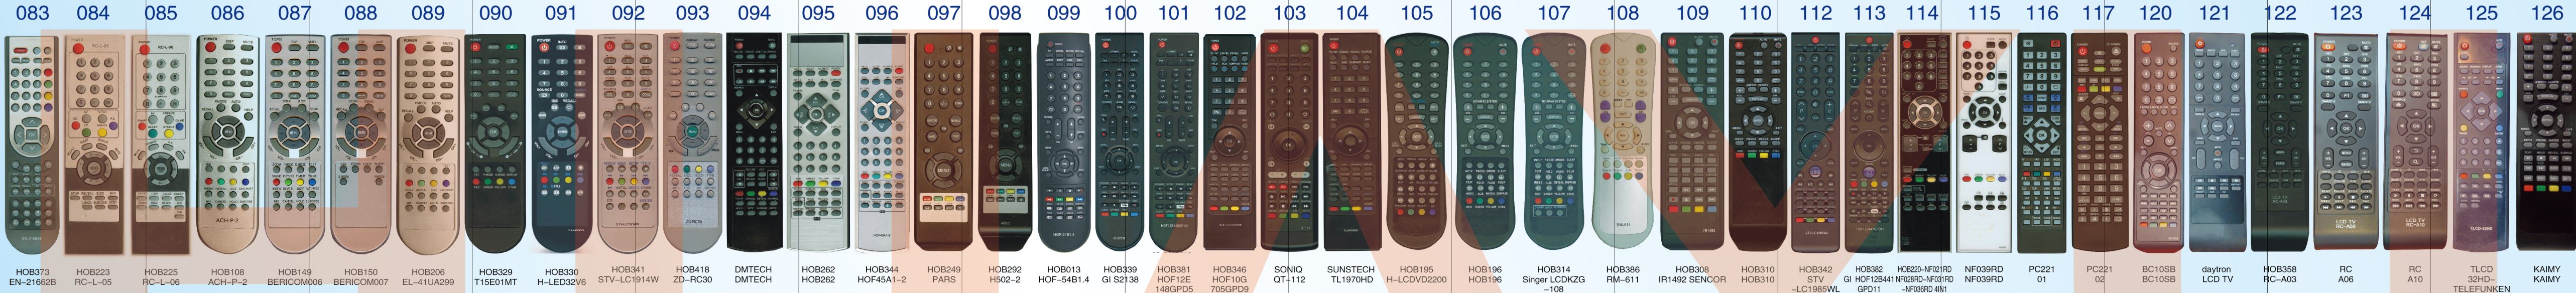 

**HUAYU<sup>®</sup>** RM-L1130+X PLUS



348 BBK\_EN-31907 349 Benq 350 china 351 EcoStar 2 352 HCH067-CHANGHONG GHK-4421A 353 Heir 2 354 HOB477 AKAI CX-507 355 HOB478 E-RCU-015 356 HOB479 AKAI A300102 357 HOB484 Akai LTA-15A15M 358 HOB489 MESTERY LCD LED TV NEW 359 HOB490 Polar HTR-D18A 360 HOB491 Polar 55 LTV6002 361 Orient 362 PROTON 2 363 POLYTRON EN-31618P 81E878 364 HOB864 SNOWA T202-1 365 HOB455 ELECTRON T-81100 366 HOB457 RL-32L700U 3D 367 HOB464 BRAVIS LED2868 HQ 368 HOB465 DIGITAL DLE-4011 370 HOB46 LUXEON LED3213 HQ 371 ORION EP 22 LCD2623 372 HOB493 HAIER 373 HOB494 SUPRA 374 HOB498 SHOWNIC 375 LEA-19V07P 376 IZUMI 377 81F579 378 ORION OR-LCD2 379 FUSION RC21b 380 SUPRA RC6w 381 SUPRA RC8b 382 SUPRA RC10w 383 SUPRA RC18b 384 RC-LEM100 385 BBK RC-LEM101 386 BBK RC-LED100 387 IZUMI TL26H211B 388 JAC 389 SKY LINE 390 TRUMAN 391 union tech



396 ATLAS HD100 397 HOB688 ATLSS HD-200S 398 KK-Y331J 399 KK-Y331J 400 HD LED100 401 GBTY ONGOV59 402 XY-B02E 403 LCD TV PHONAR 404 PHONAR LED TV 405 DAWA MV 406 IDEA 407 IDEA 408 IDEA 409 IDEA 410 IDEA 411 IDEA 412 IDEA 413 IDEA 414 IDEA 415 AOC-02 416 DEX LT-2220 417 ORION LED2643 418 Akai SLP-006P 419 Fusion FLT V 22H11 420 Fusion FLT V 32H17 421 FUSION RC15b 422 Shivaki K77 423 Shivaki K78 424 Supra TV-DVD 426 RC-GK22G1 427 H-LCD3210 428 LED321LC 429 SKYPRIME HD 430 SUPRA RC21b-1219 431 ORION LCD 432 TC1860F1-RS 433 JH-11370 434 LED-851 435 RC-D3 436 YC-53 437 STV-22LED5 438 LED-EH4720BF 439 DNS M28AM8

# HUAYU<sup>®</sup> RM-L1130+X PLUS



440 441 442 442 442 443 444 445 446 449 450 451 452 453 454 516 520 528 531 540 542 543 544 545 546 547 548 549 540 540 550 551 533 576 577 579 580 581 582 583 584 586

051D RED 33585 RC33729 HOB842 34090 34091 RC31277 Fusion RC25b RCF23b RC-E23 AKI AK61 AKI LCD AK66 AKI LCD AK68 AKI-OND IGO LCD ONIDA LCD ONIDA LCD ON87 051D BLACK SNOWA 51163 BLAUPUNKT J-1274 MERTER 33186 BRAVIS LED-1615 Marshal ME-2409 ONIDA LCD1 Akai HOF08J001 Polar.94 LTV6004 AN-LT3222 AN-LT3225 AN-LT2416 FUSION HY-079 SATURN LED40FH500U DEXP 16A3000 RUBIN RB -28D7T2C DNS S19ASL1 RM-NST60 RM-SK09 AKIRA Mouse Akira\_32LED01T2M AKIRA 39LES04T2P BLAUPUNKT SMART TV BLAUPUNKT LCD BLAUPUNKT -1088# BLAUPUNKT Cloud Walker cloudwalker



588 589 653 654 676 677 679 680 681 684 723 724 729 732 734 739 742 743 745 746 747 748 749 751 761 763 770 774 785 787 788 796 797 798 799 811 812 823 824 825 828 829 836

DAEWOO RC -670PN DAEWOO RC -753BI Hitachi CLE -1008 HITACHI RCA48105 JVC LCD LED TV REMOTE JVC RM-C3401 JVC LCD-LED TV REMOTE JVC LCD-LED TV REMOTE JVC KT1157 -SX-1277# RM-C3184 ONIDA SMART TV REMOTE 01 ONIDA SMART TV REMOTE 02 SANKEY 1 SANKEY 4 SANKEY 6 SANSUI ER -226418A SANYO LCD TV REMOTE SANYO LCD SHARP GB238WJSA SHARP GB289WJSA RC5112 SHARP LCD TV ENR39S SHARP LCD TV EN2BK27S SHARP EN2E28S TCL RC311FM3 RC3100L07 Thomson RC311 USB Toshiba CT-32F2 VU LCD TV REMOTE VU SMART TV REMOTE VU SMART TV REMOTE-02 VISION VISION VISION VISION EcoStar ECOSTAR RECONNECT LCD TV REMOTE RECONNECT LCD TV REMOTE VISE TV REMOTE Willett LCD remote WILLETT Motorola Smart TV Remote