 


HUAYU (English)
RM-L1120+X PLUS
Instruction for UNIVERSAL
LCD/LED TV REMOTE
CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller will not lose its memory when you change batteries, no need to reset.

Introduction:
RM-L1120+X PLUS is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

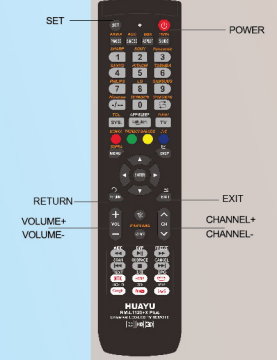

Battery Installation
In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.

Battery Description
● The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
● Please do not put old and new batteries or different types of batteries together.
● In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
● You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:
This remote controller has the following methods for setup, you can choose any of them.

 
A. Inputting code:
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.



2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.




3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.




4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



 B. Manually searching for the code:
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



 2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.



3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.



4, Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C. Automatically searching code:

 
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.




3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.




D. Point to Point Brand Searching:

 1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTH= "0"



 2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.






Brand symbol table

P.MODE	S.MODE	ASPECT	SLEEP	MENU	SOURCE	1
AKIRA	AOC	BBK	ELENBERG	SUPRA	OTHER BRANDS	SHARP
2	3	4	5	6	7	
SONY	Panasonic	SANYO	HITACHI	TOSHIBA	PHILIPS	
8	9	0				
LG	SAMSUNG	Hisense	SKYWORTH	CHANGHONG	TCL	
GUIDE	TV	RED	GREEN	YELLOW	BLUE	
PRIMA	Haier	KONKA	THOMSON	DAEWOO	JVC	

E. Restore factory Settings

  Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

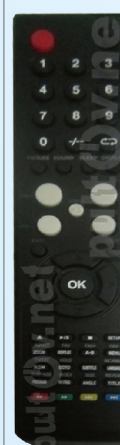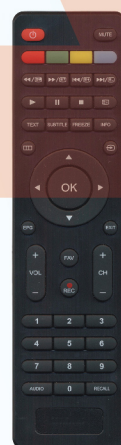000	002	003	004	005	006	010	011	012	013	014	015	016	017	018	019	020	021	022	023	024	025	026	027	028	029	030	031	032	033	034	035	036	037	038	039
																																			
AOC AOC	GENERAL LCD-831	GENERAL LCD-832	IZUMI TL19H405B	IZUMI 0152	EN 30303D	HOB301 MYSTERY KT6957 6857	HOB117 AKIRA TC1860F1	HOB187 GK23J6-C15	HOB279 AKIRA LCT-15CHST	4-3-2010-002	BBK BBK	BBK EN-31603B	HOB158 BBK LT 1504	HOB332 BBK CAMERON	HOB380 RC2465	HOB387 RC-2603	HVD208 BBK	HVD209 RC1529	HOB228 LCD 831	HOB283 SUPRA 4627STV -LC1504	HOB302 HYUNDAI 1587 RCF1B	HOB303 SUPRA306 STV-LC1515	HOB327 Supra RC3b	HOB328 Supra RCF3b	HOB409 SUPRA Y-72C2	HOB410 SUPRA RC6b	HOB411 SUPRA RC12	RCF1B RCF1B	SUPRA BD-212	SUPRA HOF12H126 GPD11	SUPRA RC1b	SUPRA RC5b	SUPRA RC5db	SUPRA RC13b	SUPRA RC-118-0B
040	041	042	043	046	047	048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	063	066	067	068	069	070	071	073	074	079	080	081	082		
																																			
SUPRA STV-LC2615ED	HOB168 SHIVAKI BT0451C	HOB231 SHIVAKI 02	ROLSER ER-31607R	HTC056 RC1994907-01	HTC058 RC198	HOB333 81E829	HOB394 81E503	HOB227 ORION	HOB252 OPENBOX -1253	HOB281 MYSTERY 5195	HOB282 MYSTERY 8151	HOB301 MYSTERY KT6957 6857	HOB326 MTV-1914LW	MESTERY LCD LED TV NEW	HSR499 HIVION	HOB402 iSTAR	HOB403 iSTAR	HOB405 iSTAR	ER-31607	HOB438 ER-31607R -1098#	LCD-2277RC	HOB302 HYUNDAI 1587 RCF1B	HOB376 H-LCD2202GCO VA1028SJ	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNAI 48KEY	IR1628 FUNAI PC221	HOB018 ELENBERG Y27401	HOB354 ELENBERG	HOB151 BERICOM008	HOB189 HOB189	HOB264 RC-A3-01	HOB273 HOB273		

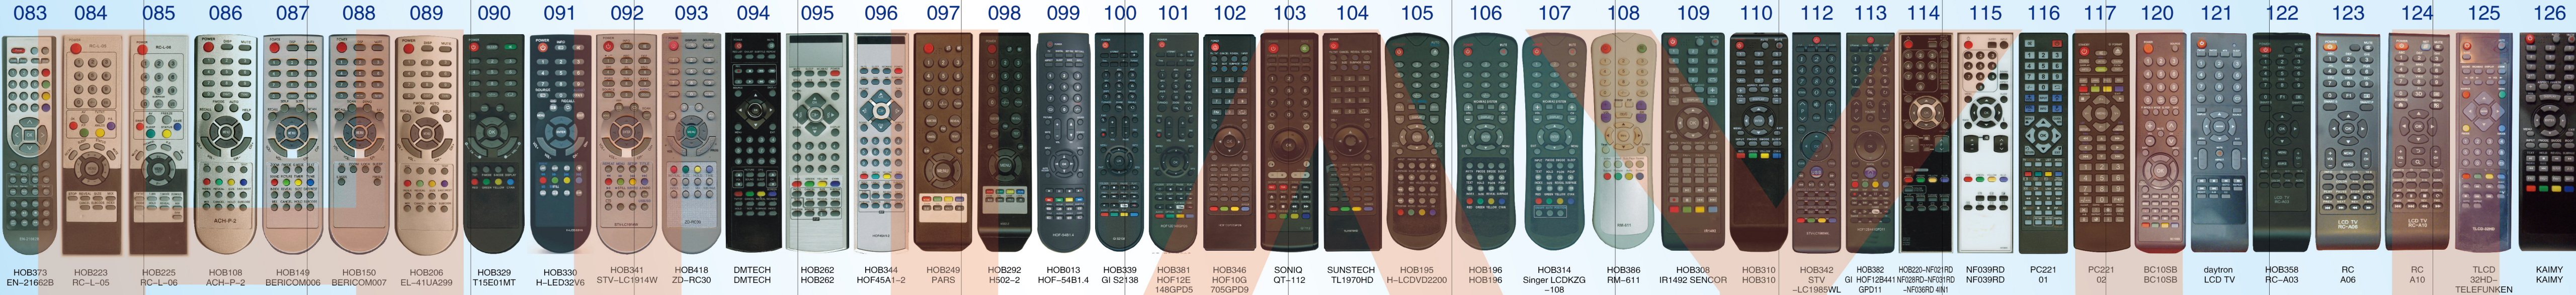 

HUAYU® RM-L1120+X PLUS



BBK-EN-31907 Benq china EcoStar 2 HCH067-CHANGHONG GHK-4421A Heir 2 HOB477 AKAI CX-507 HOB478 E-RCU-015 HOB479 AKAI A300102 HOB484 Akai LTA-15A15M HOB489 MESTERY LCD LED TV NEW HOB490 Polar HTR-D18A HOB491 Polar 55 LTV6002 Orient PROTON 2 POLYTRON EN-31618P 81E878 HOB864 SNOWA T202-1 HOB455 ELECTRON T-81100 HOB457 RL-32L700U 3D HOB464 BRAVIS LED2868 HQ HOB465 DIGITAL DLE-4011 HOB46 LUXEON LED3213 HQ ORION EP 22 LCD2623 HOB493 HAIER HOB494 SUPRA HOB498 SHOWNIC LEA-19V07P IZUMI 81F579 ORION OR-LCD2 FUSION RC21b SUPRA RC6w SUPRA RC8b SUPRA RC10w SUPRA RC18b RC-LEM100 BBK RC-LEM101 BBK RC-LED100 IZUMI_ TL26H211B JAC SKY LINE TRUMAN union tech



ATLAS HD100 HOB688 ATLS HD-200S KK-Y331J KK-Y331J HD LED100 GBTV ONGOV59 XY-B02E LCD TV PHONAR PHONAR LED TV DAWA MV iDEA iDEA iDEA iDEA iDEA iDEA AOC-02 DEX LT-2220 ORION LED2643 Akai SLP-006P Fusion FLTV 22H11 Fusion FLTV 32H17 FUSION RC15b Shivaki K77 Shivaki K78 Supra TV-DVD RC-GK22G1 H-LCD3210 LED321LC SKYPRIME HD SUPRA RC21b-1219 ORION LCD TC1860F1-RS JH-11370 LED-851 RC-D3 YC-53 STV-22LED5 LED-EH4720BF DNS M28AM8

440	441	442	442	442	442	443	444	445	446	449	450	451	452	453	454	516	520	528	531	540	542	543	544	545	546	547	548	549	540	540	550	551	533	576	577	579	580	581	582	583	584	586
051D RED	33585	RC33729	HOB842	34090	34091	RC31277	Fusion RC25b	RCF23b	RC-E23	AKI AK61	AKI LCD AK66	AKI LCD AK68	AKI-OND IGO LCD	ONIDA LCD	ONIDA LCD ON87	051D BLACK	SNOWA 51163	BLAUPUNKT	J-1274	MERTER 33186	BRAVIS LED-1615	Marshal ME-2409	ONIDA LCD1	Akai HOF08J001	Polar.94 LTV6004	AN-LT3222 AN-LT3225 AN-LT2416	FUSION HY-079	SATURN LED40FD500U	DEXP 16A3000	RUBIN RB -28D7T2C	DNS S19ASL1	RM-NST60	RM-SK09	AKIRA Mouse 32LED01T2M	Akira_39LES04T2P	AKIRA 39LES04T2P	BLAUPUNKT SMART TV	BLAUPUNKT LCD	BLAUPUNKT -1088#	BLAUPUNKT	Cloud Walker	cloudwalker
588	589	653	654	676	677	679	680	681	684	723	724	729	732	734	739	742	743	745	746	747	748	749	751	761	763	770	774	785	787	788	796	797	798	799	811	812	823	824	825	828	829	836
DAEWOO RC -670PN	DAEWOO RC -753BI	Hitachi CLE -1008	HITACHI RCA48105	JVC LCD LED TV REMOTE	JVC RM-C3401	JVC LCD-LED TV REMOTE	JVC LCD-LED TV REMOTE	JVC KT1157 -SX-1277#	RM-C3184	ONIDA SMART TV REMOTE 01	ONIDA SMART TV REMOTE 02	SANKEY 1	SANKEY 4	SANKEY 6	SANSUI ER -226418A	SANYO LCD TV REMOTE	SANYO LCD	SHARP GB238WJSA	SHARP GB269WJSA	RC5112	SHARP LCD TV EN3R39S	SHARP LCD TV EN2B27S	SHARP EN2E28S	TCL RC311FM3	RC3100L07	Thomson RC311 USB	Toshiba CT-32F2	VU LCD TV REMOTE	VU SMART TV REMOTE	VU SMART TV REMOTE-02	VISION	VISION	VISION	VISION	Ecostar	ECOSTAR	RECONNECT LCD TV REMOTE	RECONNECT LCD TV REMOTE	VISE TV REMOTE	Willett LCD remote	WILLETT	Motorola Smart TV Remote