

纸张薄 尺寸: 580*145mm


HUAYU®

DVB-T2+TV Ver.2026

English

INSTRUCTION FOR UNIVERSAL REMOTE CONTROL

Thank you for using the remote controller. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setting it. However, if it could not work well, it should be set with the following methods before remote controlling your DVB. The remote controller would not lose its memory when the power is down so that you could replace the battery without resetting it.

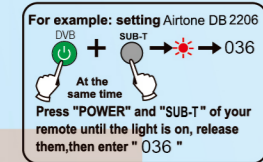

Settings of Remote controller:

The remote controller has the following methods of settings, please choose any of them.

Inputting code:

1. Turn on DVB manually, make it in a normal play state, point the remote controller at the DVB, and then find the corresponding 3-digit code of the corresponding brand from the code table.
2. Press "POWER" and "SUB-T" key of your remote control, until the light is on, then release two buttons, enter the corresponding code.
3. Test whether other function buttons (such as "Volume" buttons) could work well. If not, repeat steps 2 and 3 until you find the suitable set of code.

Automatically searching code:

1. Turn on DVB manually, make it in a normal play state, point the remote controller at the DVB.

2. Press "POWER" button, and hold about 6 seconds, the remote control will turn to automatically search mode. When volume appear on your DVB, release the button on time, set to be finished.
3. Test whether other function buttons (such as "Volume" buttons) could work well. If not, repeat steps 2 until you find the suitable set of code.

TV Automatically searching code:

1. Turn on TV manually, make it in a normal play state, point the remote controller at the TV.
2. Press TV "POWER" button, and hold about 6 seconds, then LED continuously flash, the remote control will turn to automatically search mode. When volume appear on your TV, release the button on time, set to be finished, LED would be off.
3. Test whether other function buttons (such as "Volume" buttons) could work well. If not, repeat steps 2 until you find the suitable set of code.

Technical parameters:
Remote Controlling Distance: About 10 meters (varies by different types).
Battery Type: two pieces of AAA Batteries.

русский

Инструкция по эксплуатации универсального пульта дистанционного управления стандарта DVB-T2+TV

Благодарим за использование данного пульта дистанционного управления. Перед первым использованием необходимо вставить батарейки. В случае правильной работы всех функций пульта дальнейшая настройка не требуется. В противном случае необходимо выполнить настройку одним из предложенных способов. Настройки пульта постоянно хранятся в памяти, поэтому после замены батареек повторную настройку производить не нужно.

Ручной ввод кода

1. Убедитесь, что телевизор и приставка включены.
2. Найдите соответствующий код в каталоге пультов
3. Одновременно нажмите кнопки "DVB" и "SUB-T", загорится световой индикатор (отпустите кнопки)
4. Введите трехзначный код (указан над изображением пульта), световой индикатор погаснет. Настройка завершена, проверьте работоспособность, если пульт работает некорректно, повторите настройку.

Технические характеристики

Дальность действия пульта дистанционного управления около 8 метров, в зависимости от модели пульта.
Тип элементов питания: 2 батарейки AAA.

Автоматический поиск кода

1. Убедитесь, что телевизор и приставка включены.
2. Нажмите и удерживайте кнопку "DVB", на пульте загорается световой индикатор.
3. Когда на экране ТВ появится индикатор громкости, отпустите кнопку "DVB" Пульта настроен, проверьте работоспособность, если пульт работает некорректно, повторите настройку.


Ссылка на онлайн каталог пультов:



SCAN ME



B0066103

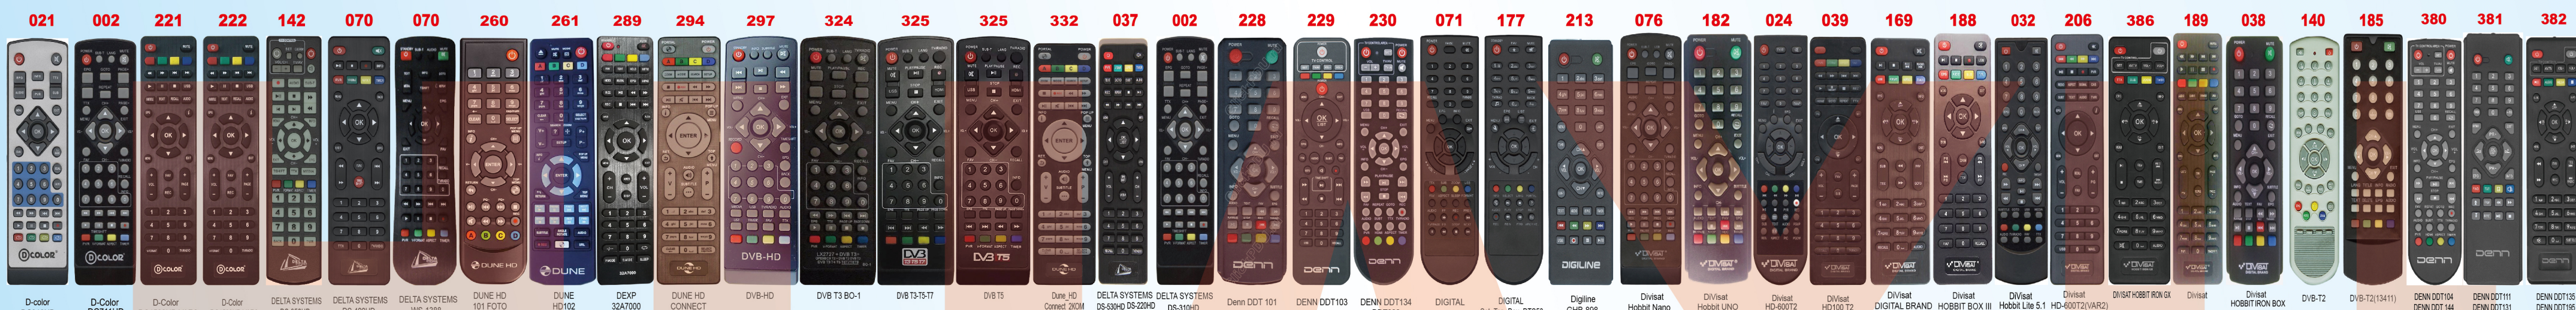

021 D-color DC910HD 002 D-Color DC711HD 221 D-Color DC1502HD VAR2 222 D-Color DC1502HD VAR3 142 DELTA SYSTEMS DS-950HD 070 DELTA SYSTEMS DS-400HD 070 DELTA SYSTEMS WS-1388 260 DUNE HD 101 FOTO 261 DUNE HD102 289 DEXP 32A7000 294 DUNE HD CONNECT 297 DVB-HD 324 DVB T3 BO-1 325 DVB T3-T7 325 DVB T5 332 Dune_HD Connect ZK0M 037 DELTA SYSTEMS DS-530HD DS-220HD DS-910HD 002 DELTA SYSTEMS DS-310HD 228 Deneb DDT 101 229 DENN DDT103 230 DENN DDT134 DDT202 071 DIGITAL Set_Top_Box_DTS53 177 DIGITAL Set_Top_Box_DTS53 213 Digiline GHB-898 076 Divisat Hobbit Nano 182 Divisat Hobbit UNO 024 Divisat HD-600T2 039 Divisat HD100 T2 169 Divisat DIGITAL BRAND 188 Divisat HOBBIT BOX III 032 Divisat Hobbit Life 5.1 206 Divisat HD-600T2(VAR2) 386 Divisat HOBBIT IRON GX 189 Divisat 038 Divisat HOBBIT IRON BOX 140 DVB-T2 185 DVB-T2(13411) 380 DENN DDT104 DENN DDT144 381 DENN DDT111 DENN DDT131 382 DENN DDT135 DENN DDT195



253 EUROSKY ES-3011 272 EM77HD 278 ELTEXALATAU 290 ERISSON 42LEN52 291 EUROSKY ES 292 EUROSKY ES 298 EUROSKY ES 317 EUROMAX 013 333 ELTEX NV-501 077 Elect EDR-7916 078 ELGREEN DVT2-5500 HD 183 ELTEX NV-102 190 ELTEX NV-50 015 ENEGRY EVO-1 174 eplutus DVB-137T 174 eplutus DVB-167T 146 ES-3011 139 EUROSAT DVB-S 045 EUROSKY DVB 4100 SAT 101 EUROSKY ES 040 EVO EVOT2 101 015 EVO 01NEW 418 EPLUTUS AN-233 214 FORMULER Z Plus IPTV 372 FORCE7777 A/C 399 FORMULER Z7 400 FORMULER Z11 254 GoldStar GS8033HD 363 GoldMaster I-905 mini 372 GoldMaster T717HD 372 GMM302 299 Gmini MagicBox DVB-T2 320 GMM HD SMILE 002 GAL RS-1010L-T 018 General Satellite TE-8714 157 GI FTA S 053 Gi Fly 084 Gi HD SLIM 191 Gi HD SLIM COMBO 175 Gi S1013 198 Gi SPARK2 COMBO 192 Gi UNI 249 Gi UNI 2++ 242 Globo S3 Micro HD 001 GLOBO GLE60 E-RCU-018



099 mdi DBR-701 039 MEZZO HD8911 104 MTC 1003G VAR3 061 MTC DN300, DS300A 102 MTC EKT DCD2204 103 MTC EKT DCD2304 104 MTC URC18001 251 MTS RC-306C-05 027 MTC WS-28A 002 MYSTERY MMP 105 MYSTERY MMP-73D 209 MYSTERY MMP-85D72 249 Mecool MS PLUS 249 MECOOL KM9PRO 391 MEZZO GX3235T2C 414 MECOOL KM2 PLUS 403 MOVIX MVX01A 421 MXQ PRO6G 421 MXQ-MXQ PRO-4K 271 NIKAI 310 NEW NOVA SAT 352 NOMI 2700-550NOMI 367 NTV - HD J1 179 NewStar GSR-9000S 146 NOVAT2 392 NICEDEVICE T624 415 NVIDIA SHIELD TV PRO 4K HDR 389 NICEDEVICE T626 422 NTV PLUS HD J4 274 OTAU 282 OTAU 283 OTAU 284 OTAU 285 OTAU 300 OPENBOX ST-009 MSTAR 301 OPENFOX T2 MINI SMAR 314 on lime-RS 371 Openbox AS2 HD 371 Openbox AS4K CI PRO 371 Openbox S6 HD PVR(5469) 371 OPENBOX_SX4 HD SX6 HD(11875) 329 OPEN SX X1 329 OPEN SX X2 329 OPEN SX 353 openbox s3_micro 373 OPENBOX T777 373 OP5MTA HD-911C



354 ORTON X-80 355 ORTON X403 005 OPENBOX 168 ORIEL ПДV6 022 ORIEL ПДV6 026 ORIEL ПДV10 020 ORIEL 710 017 ORIEL 790 010 ORIEL 810 124 ORION+ RS-T20 HD 044 ORION+ RS-T21 HD 265 OPENBOX GOLD M5 395 OP5BITA OT-DVB03 397 OP5BITA OT-DVB24 398 OP5BITA OT-DVB27 298 OP5BITA EVINX HD-911DC PW201 PANTESAT 267 pantestat-hd 302 PANTESAT 337 pantestat-hd 009 Паpыpa S817R PatixDigital PT-400 208 Patix Digital JXD-366 164 perfeo PF-168 (VAR3) 125 perfeo PF-162 (VAR1) 162 perfeo PF-T2-1 207 perfeo PF-T2-1 162 perfeo PF-148-1 136 Reflect Min 199 PHILIPS HMP2500T 025 POLAR DT-1002 008 Prology DVT-100 393 PERFEO LEADER 392 PERFEO STREAM 2 303 Q-SAT Q-150 339 Q-150 410 Q5 MAX ATV 408 QUIPI START PLUS 304 ROLSEN RDB-525 305 ROMSAT T8005HD 306 ROMSAT T8020HD 336 Rostelecom WINK 384 ROMBICA CINEMA TV ONE 385 ROMBICA CINEMA TV 07 340 RC-7300L 141 RB34H-C1

